

Getting to know your remote control



POWER turns the TV on or off.

VOL controls the volume on your TV.

TIVO takes you to the main menu.

MUTE turns the sound on or off.

The **CONTROLLER** navigates using the UP, DOWN, LEFT or RIGHT zones.

BACK opens the main menu or returns to the previous screen.

LAST allows access to the last channel viewed.

NETFLIX launches the Netflix app.

MICROPHONE for voice search.

INPUT selects the input source for your TV.


GUIDE gives access to the program guide.

CH changes channels up and down.

The "i" option provides more information about what you are watching.

OK, in the centre of the controller, accepts the current selection.

DVR allows you to program and access your recordings.

VOICE SEARCH function allows you to find your series and movies. On some remote controls, the voice search looks like 

APPS gives you access to all your applications.

DIGITAL KEYS are used to enter channel numbers, the parental control PIN, etc.

