

## Getting to know your remote control

**POWER** turns the TV on or off.

**VOL** controls the volume on your TV.

**TIVO** takes you to the main menu

**MUTE** turns the sound on or off.

The **CONTROLLER** navigates using the UP, DOWN, LEFT or RIGHT zones.

**BACK** opens the main menu or returns to the previous screen.

**LAST** allows access to the last channel viewed.

**NETFLIX** launches the Netflix app.



**MICROPHONE** for voice search.

**INPUT** selects the input source for your TV.

**GUIDE** gives access to the program guide.

CH changes channels up and down.

The "i" option provides more information about what you are watching.

**OK**, , in the centre of the controller, accepts the current selection.

**DVR** allows you to program and access your recordings.

**VOICE SEARCH** function allows you to find your series and movies. On some remote controls, the voice search looks like

**APPS** gives you access to all your applications.

**DIGITAL KEYS** are used to enter channel numbers, the parental control PIN, etc.